

AKRAPOVIČ EVOLUTION OPEN EXHAUST SYSTEM

for the

DUCATI 1098, 1098S (07-08), 1098R (08-09), 848 (08-09), 1198, 1198S (09)

Congratulations on purchasing an Akrapovič exhaust system. Please read these installation instructions carefully. If you have any trouble installing the system please contact your authorized dealer!

IMPORTANT INFORMATION

Exclusion of Certain Liability

- The manufacturer, importer or dealer shall not be liable for any incidental damage including personal injury or any other damages caused by improper installation or operation of the Akrapovič exhaust system. When installing the Akrapovič exhaust system be careful that the exhaust system does not touch other parts sensitive to high temperature.
- 2. Akrapovič makes no representation or warranties with regard to damage caused by the improper installation, use and maintenance of the Akrapovič exhaust system. The warranty is limited to defects recognized by our technical department and to normal use, and excludes items subject to normal wear (gaskets and damping wool). The guarantee is void in case of accident, modification, improper or competition use.
- 3. Do not attempt to install the Akrapovič exhaust system on a motorcycle for which it was not made or tested by Akrapovič.
- 4. When the exhaust system gets very hot during operation, be careful not to burn yourself on the exhaust system or parts which are in direct contact with it, even when the motor is not running. Also protect other people, especially children, from the injuries mentioned above.
- In some cases Akrapovič exhaust system kits contain chemical products (ceramic anti-seizing grease; bolt sealant). Handle with care, do not inhale or swallow. Avoid excessive contact with skin, eyes or mucous membranes. Keep out of reach of children.
- 6. Technical specifications of Akrapovič exhaust systems and related products subject to change without notice.

Trademarks

The Akrapovič Exhaust System Technology logo is a registered trademark of Akrapovič d.d.

Akrapovic website

Information about Akrapovič exhaust systems and related products is available on the Akrapovič website at: <u>http://www.akrapovic.com/</u>


Copyright

No part of the Akrapovič exhaust system or its documentation may be reproduced or distributed in any form or by any means without the prior written authorization of the Akrapovič company.

© Akrapovič, d.d. All rights reserved.

Symbols

The following symbols are used throughout these installation instructions:

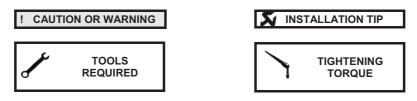



USE BOLT SEALANT; Apply 3 to 4 small drops of bolt sealant onto the cleaned and degreased threads before tightening bolts. WARNING! Avoid contact with skin, eyes and mucous membranes. Do not inhale fumes. Keep out of the reach of children.



USE ANTI-SEIZING GREASE (white tube); Prevents seizing, corrosion and excessive wear between the titanium components of your exhaust system. WARNING! Avoid eye contact. Avoid excessive skin contact. Keep out of the reach of children.

USE ANTI-SEIZE LEAD-FREE COPPER PASTE (black tube); Provides trouble-free and long-lasting protection against seizing, corrosion and rusting of bolts, threaded ends, nuts, joints, etc. Also protects against vibration, wear and impact. WARNING! Avoid eye contact. Avoid excessive skin contact. Keep out of the reach of children.



INSTALLATION INSTRUCTIONS

Z	BEFORE INSTALLING CHECK SCHEMATIC OF THE EXHAUST SYSTEM!
!	IF ANY ITEMS IN THE AKRAPOVIC EXHAUST SYSTEM PACKAGE ARE MISSING PLEASE CONTACT YOUR AUTHORIZED DEALER. KEEP THE SCHEMATIC FOR FUTURE REFERENCE.
!	THESE INSTALLATION INSTRUCTIONS MUST BE READ CAREFULLY IN ORDER TO ENSURE PROPER INSTALLATION AND OPERATION OF THE AKRAPOVIC EXHAUST SYSTEM.
!	THE EXHAUST SYSTEM CAN BE EXTREMELY HOT. ALLOW THE MOTORCYCLE TO COOL DOWN BEFORE BEGINNING INSTALLATION.
۶	WE ADVISE YOU TO LEAVE INSTALLATION TO A QUALIFIED SERVICEMAN. IMPROPER INSTALLATION MAY RESULT IN A SHORTER LIFETIME OF THE EXHAUST SYSTEM AND/OR DAMAGE TO THE MOTORCYCLE.

Screwdriver for headless slotted screws	×	T-handle 8 mm wrench T-handle swiveling 10 mm wrench T-handle 3 mm three hexagon key wrench T-handle 4 mm three hexagon key wrench T-handle 6 mm three hexagon key wrench Combination 10 mm wrench
Spring puller	σ	

REMOVAL OF STOCK EXHAUST SYSTEM:

Put the motorcycle on a side stand, we recommend a racing stand. Make sure, that surface is solid and flat.
Unscrew the bolts from the muffler clamps and muffler bracket (Figure 1, 2). Unhook the stock springs and remove the mufflers with welded link-pipes (Figure 3, 4).



Figure 1



Figure 2



Figure 3



Figure 4



3. Unscrew and remove the right foot-shield and stock heat shield (Figure 5, 6).



Figure 5



Figure 6

4. Remove the lower and the middle parts of the cowling (Figure 7, 8, 9, 10).



Figure 7



Figure 8



Figure 9



Figure 10

5. Unscrew the collector bracket and rear header heat shield (Figure 11, 12). Unhook the springs from rear and front header-collector joints (Figure 13, 14). Temporarily unscrew the servo motor (Figure 15). WARNING: do not disconnect the electrical installation of the servo motor! Partially remove the collector – enough to unscrew the exhaust valve bracket (Figure 16, 17). Remove the cables from the valve (Figure 18). Remove the collector (Figure 19). Completely remove the exhaust valve cables from the motorcycle. Reattach the servo motor on the frame (without the cables!).



Figure 11

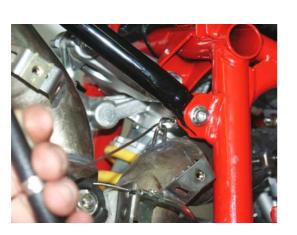


Figure 13



Figure 12



Figure 14



Figure 15



Figure 16









Figure 18



Figure 19

Unscrew the rear brake oil reservoir for easier access. WARNING: do not disconnect the brake fluid tube! Unscrew and remove the rear header tube – leave the stock gasket on the exhaust port (Figure 20, 21, 22). Unscrew and remove the lambda sensor (Figure 23). Unscrew and remove the front header tube – leave the stock gasket on the exhaust port (Figure 24, 25).



Figure 20



Figure 21





Figure 22



Figure 23



Figure 24



Figure 25

INSTALLATION OF THE AKRAPOVIČ EVOLUTION EXHAUST SYSTEM:

1. Remove the rubber spacer from stock collector and attach it to Akrapovič collector (Figure 26, 27).



Figure 26



Figure 27



 Attach the front header tube (Figure 28). Tighten the lambda sensor (Figure 29). Attach the rear header tube and reinstall the rear brake oil reservoir (Figure 30). Slide the (front and rear headers to collector) link headers on headers and attach the springs (Figure 31, 32, 33, 34). Tighten the rear header bracket to the frame using stock bolt (Figure 35).



Figure 28



Figure 30

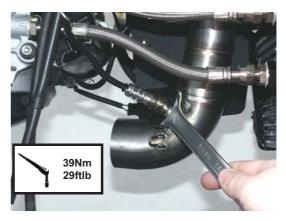


Figure 29



Figure 31



Figure 32



Figure 33





Figure 34

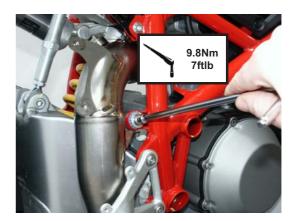


Figure 35

3. Slide the collector onto the link headers - coat the interior side of the input bushes of the collector with Akrapovič ceramic anti-seizing grease (white tube) and attach the springs (Figure 36, 37).



Figure 36



Figure 37

4. Slide the Y link pipe onto the collector - coat the interior side of the input bush of the Y link pipe with Akrapovič ceramic anti-seizing grease (white tube) and attach the spring (Figure 38, 39).



Figure 38



Figure 39

5. Correctly assemble the Akrapovič heat shield and tighten it onto the heat shield bracket (Figure 40, 41, 42). Reattach the stock foot shield (Figure 43).



Figure 40



Figure 41

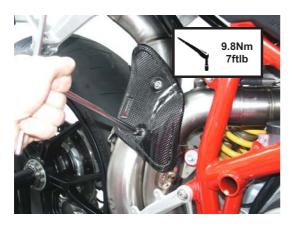


Figure 42



Figure 43

6. Correctly insert the "venturi" inserts into the inlets of both mufflers (Figure 44, 45). Slide the mufflers onto the Y link pipe (Figure 46). Attach the Akrapovič springs (Figure 47). Correctly position the carbon-fiber clamps and slide them onto the mufflers. WARNING: open the clamps slightly wider than the diameter of the outer sleeve of the mufflers – do not scrape them along the mufflers outer sleeve! Be careful not to damage paint or any other part of the motorcycle during this process! (Figure 48). Tighten the clamps using stock bolts and spacers (Figure 49). Make sure the mufflers or link pipes are not touching the frame or any other parts of the motorcycle.



Figure 44



Figure 45





Figure 46



Figure 47



Figure 48



Figure 49

Final installation:

1. Clean grease spots:

- Muffler titanium outer sleeve: use a soft cloth sprayed with a multi-purpose spray lubricant (WD-40 or a. equivalent).
- Muffler titanium outer sleeve: use a soft cloth sprayed with a multi-purpose spray lubricant (WD-40 or b. equivalent).
- C.
- Muffler carbon-fiber outlet cap: use a soft dry cloth. EVOLUTION exhaust: stainless steel header tubes: use a soft cloth sprayed with a contact cleaner, then wipe d. with a soft dry cloth
- EVOLUTION exhaust: titanium link headers, collector and Y link pipe: use a soft cloth sprayed with a multie. purpose spray lubricant (WD-40 or equivalent).

Cleaning will prevent spots from burning onto the surface. Do not use aggressive chemical cleaners, because they can damage the sticker.

2. WARNING: after running engine for 30 minutes, tighten the bolts on the Akrapovič carbon-fiber heat shields!





Figure 50

3. Check the operation of the brakes and suspension. Make sure all the bolts are sufficiently tightened. In case the exhaust system touches the cowling or other parts repeat the adjustment of the exhaust system or contact your authorized dealer.

IT IS NORMAL IF WHITE SMOKE COMES OUT OF THE MUFFLER ON FIRST OPERATION.

DO NOT STAND BEHIND THE MUFFLER ON FIRST OPERATION.

DO NOT USE AUTOMOTIVE WHEEL CLEANERS OR ANY CLEANING PRODUCTS WHICH CONTAIN ACIDIC ADDITIVES TO CLEAN AKRAPOVIC EXHAUST SYSTEMS.

MAINTENANCE OF THE AKRAPOVIČ EXHAUST SYSTEM

- 1. Clean the titanium exhaust components with a multi-purpose spray lubricant (WD-40 or equivalent), carbon fiber exhaust components with soft and dry cloth and stainless steel components with soft cloth sprayed with contact cleaner, then wipe with soft and dry cloth. Do not use aggressive chemical cleaners, because they can damage the sticker. A change in the color of the exhaust system is normal due to the high temperatures.
- 2. The wearing out of the muffler silencing material depends on the type of the engine and riding style. Contact your dealer/serviceman if visible changes appear on muffler's outer sleeve or the noise level is increased.
- 3. Periodically make sure all the bolts and springs are sufficiently tight.

🔊 AKRAPOVIĆ

