

Installation instructions

Akrapovič Exhaust System
Slip-On
for the
Triumph Speed Triple 1050



Congratulations on purchasing an Akrapovič exhaust system. Please read the entire installation manual prior to undertaking any activities related to installation of your new Akrapovič exhaust system. In case you do not fully understand the manual or any of its parts, please contact your authorized dealer!

This product should be <u>installed by someone with sufficient knowledge</u> of exhaust systems and their installation, and appropriate hand or power tools. If you are not qualified for this work, please utilize a certified mechanic for installation. By installing Your Akrapovič exhaust system, you indicate that you have read the installation manual in its entirety and you agree with the terms stated herein.

It is your responsibility to <u>follow all installation instruction guidelines</u> supplied with the Akrapovič exhaust system and undertake all necessary safety precautions. Akrapovič d.d. assumes no responsibility for damages occurring from misuse, abuse, improper installation, improper operation, lack of responsible care, or all previously stated reasons resulting from incompatibility with other manufacturer's products and/or systems.

IMPORTANT INFORMATION

Exclusion of Certain Liability

- The manufacturer, importer or dealer shall not be liable for any incidental damage including personal injury
 or any other damages caused by improper installation or operation of the Akrapovič exhaust system. When
 installing the Akrapovič exhaust system be careful that the exhaust system does not touch other parts
 sensitive to high temperature.
- 2. Akrapovič makes no representation or warranties with regard to damage caused by the improper installation, use and maintenance of the Akrapovič exhaust system. The warranty is limited to defects recognized by our technical department and due to normal use, and excludes items subject to normal wear (gaskets and damping wool). The guarantee is void in case of accident, modification, improper or competition use.
- 3. Do not attempt to install the Akrapovič exhaust system on a vehicle model for which it was not made or tested by Akrapovič.
- 4. When the exhaust system gets very hot during operation, be careful not to burn yourself on the exhaust system or parts which are in direct contact with it, even when the engine is not running. Also protect other people, especially children, from the injuries mentioned above.
- 5. In some cases Akrapovič exhaust system kits contain chemical products (ceramic anti-seizing grease; bolt sealant). Handle with care, do not inhale or swallow. Avoid excessive contact with skin, eyes or mucous membranes. Keep out of reach of children.
- 6. Technical specifications of Akrapovič exhaust systems and related products are subject to change without notice.
- 7. <u>Before removing the original exhaust system</u> from your vehicle, please compare the parts you received with the list of materials provided in the installation manual in order to assure that you have all the parts necessary for the installation of your new Akrapovič exhaust system.
- 8. Although this manual consists of instructions for installation in written form, as well as photographs and pictures representing individual steps of the installation, please note that the photographs and pictures are symbolic and are intended for representation of general overview only. The <u>photographs and pictures</u> contained herein should serve as a guideline only and actual installation of the exhaust system may not correspond with the photographs and pictures entirely.
- 9. The process of uninstalling the original exhaust system may vary depending on the existing exhaust system. Please follow the original exhaust system manufacturer's instructions for uninstalling the original exhaust system.

Trademarks

The Akrapovič Exhaust System Technology logo is a registered trademark of Akrapovič d.d.

Akrapovič website

Information about Akrapovič exhaust systems and related products is available on the Akrapovič website at: http://www.akrapovic.com/

Copyright

No part of the Akrapovič exhaust system or its documentation may be reproduced or distributed in any form or by any means without the prior written authorization of the Akrapovič company.

© Akrapovič, d.d. All rights reserved.

Symbols

The following symbols are used throughout these installation instructions:






USE BOLT SEALANT; Apply 3 to 4 small drops of bolt sealant onto the cleaned and degreased threads before tightening the bolts. WARNING! Avoid contact with skin, eyes and mucous membranes. Do not inhale fumes. Keep out of reach of children.



USE ANTI-SEIZE LEAD-FREE COPPER PASTE (black tube); Provides trouble-free and long-lasting protection against seizing, corrosion and rusting of bolts, threaded ends, nuts, joints, etc. Also protects against vibration, wear and impact. **WARNING! Avoid eye contact. Avoid excessive skin contact. Keep out of reach of children.**



USE ANTI-SEIZING GREASE (white tube); Prevents seizing, corrosion and excessive wear between the titanium components of your exhaust system. **WARNING! Avoid eye contact. Avoid excessive skin contact. Keep out of reach of children.**

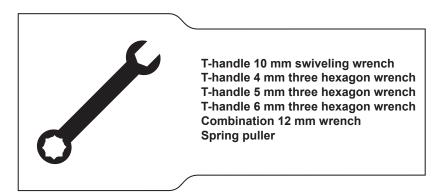



BEFORE INSTALLING, CHECK SCHEMATIC OF THE EXHAUST SYSTEM! THE LATEST VERSION OF THE PARTS LIST AND SCHEMATIC DRAWINGS OF THE PRODUCTS ARE AVAILABLE ON OUR WEB PAGE.

- IF ANY ITEMS IN THE AKRAPOVIČ EXHAUST SYSTEM PACKAGE ARE MISSING, PLEASE CONTACT YOUR AUTHORIZED DEALER. KEEP THE SCHEMATIC FOR FUTURE REFERENCE.
- THESE INSTALLATION INSTRUCTIONS MUST BE READ CAREFULLY IN ORDER TO ENSURE PROPER INSTALLATION AND OPERATION OF THE AKRAPOVIČ EXHAUST SYSTEM.
- THE EXHAUST SYSTEM CAN BE EXTREMELY HOT. ALLOW THE EXHAUST AND ENGINE TO COOL DOWN BEFORE BEGINNING INSTALLATION.
- X

WE ADVISE YOU TO LEAVE INSTALLATION TO A QUALIFIED SERVICEMAN. IMPROPER INSTALLATION MAY RESULT IN A SHORTER LIFETIME OF THE EXHAUST SYSTEM AND/OR DAMAGE TO THE VEHICLE.

REMOVAL OF STOCK EXHAUST SYSTEM:

- 1. Put the motorcycle on a side stand, we recommend a racing stand. Make sure, that surface is solid and flat.
- 2. Remove the seat, unscrew the marked bolts and remove seat cowling (Figure 1).
- WARNING: make sure, not to damage any part of the motorcycle during this procedure!



- 3. Unscrew link pipe muffler connection clamp on both sides of the motorcycle (Figure 2).
- ! WARNING: make sure, not to damage any part of the motorcycle during this procedure!



- 4. Unscrew marked mufflers' brackets' bolts and carefully remove stock mufflers (Figure 3).
- WARNING: make sure, not to damage any part of the motorcycle during this procedure!



- 5. Unscrew link pipe header pipe connection clamp (Figure 4).
- ! WARNING: make sure, not to damage any part of the motorcycle during this procedure!



- 6. Unscrew marked link pipe brackets' bolt and carefully remove stock link pipe (Figure 5).
- ! WARNING: make sure, not to damage any part of the motorcycle during this procedure!



INSTALLATION OF AKRAPOVIČ EXHAUST SYSTEM:

- 1. Correctly install Akrapovič metal clamp onto the link pipe's inlet (Figure 6).
- WARNING: use anti-seize copper paste on bolt threads of the metal clamp!



- Correctly position and slide the Akrapovič link pipe onto the stock header pipe, hand tighten the metal clamp and brackets' bolt - use stock bolt (Figure 7).
- ! CAUTION: do not fully tighten the metal clamp and bracket's bolt yet!



- 3. Correctly position the carbon fiber clamps and slide them onto the mufflers bear in mind the left offset of the carbon fiber clamp viewed from the rear for right side and the right offset for the left side (Figure 8, 9).
- WARNING: open the clamps slightly wider than the diameter of the outer sleeve of the mufflers do not scrape them along the mufflers outer sleeve!




CAUTION: do not fully tighten carbon clamps bolts' yet!



- 4. Position the mufflers correctly, slide them onto the outlet side of the Akrapovič link pipes and attach the springs. Align the mufflers in respect to the motorcycle and tighten the carbon fiber clamps using Akrapovič bolts and nuts with specified torque (Figure 10, 11).
- ! WARNING: make sure, that springs pull the muffler all the way onto the link pipe use rubber mallet if necessary to tap the connections into place!



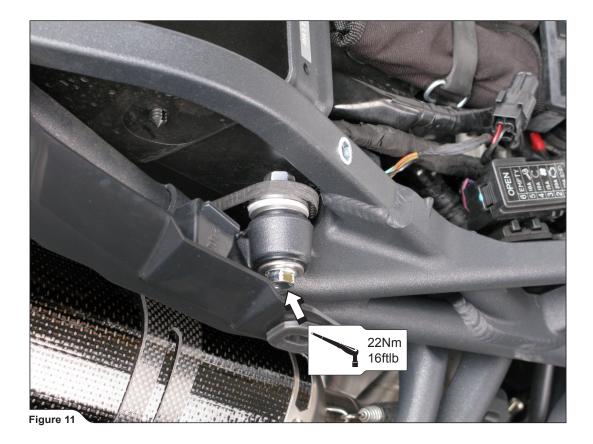


- 5. Tighten marked bolt on carbon fibre clamp on each muffler with specified torque (Figure 12).
- ! WARNING: make sure, not to damage any part of the motorcycle during this procedure!



- 6. Tighten link pipe brackets' bolt and Akrapovič link pipe header pipe connection clamp to the specified torque (Figure 13, 14).
- WARNING: make sure, not to damage any part of the motorcycle during this procedure!



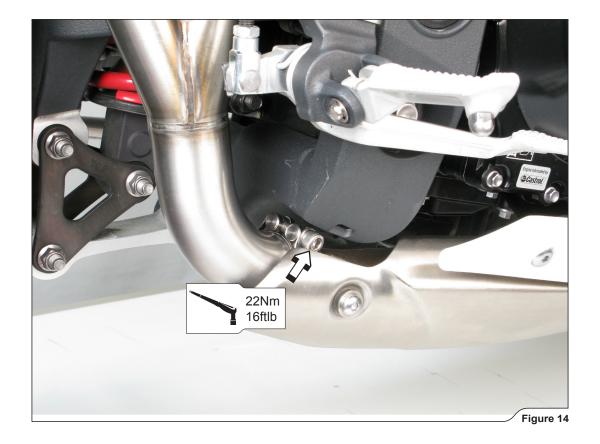

Final installation:

Clean grease spots:

- a. Muffler titanium outer sleeve: use a soft cloth sprayed with a multi-purpose spray lubricant (WD-40 orequivalent).
- b. Muffler carbon-fiber outer sleeve: use a soft dry cloth.
- c. Slip-On with stainless steel link pipe: use a soft cloth sprayed with a contact cleaner, then wipe wit a soft dry cloth.

Cleaning will prevent spots from burning onto the surface. Do not use aggressive chemical cleaners, because they can damage the sticker.

- ! WARNING: make sure all the bolts are sufficiently tightened. In case the exhaust system touches the cowling or other parts repeat the adjustment of the exhaust system or contact your authorized dealer.
- ! WARNING: after running engine for 30 minutes, tighten the bolts of the Akrapovic carbon-fiber heat shield!
- IT IS NORMAL IF WHITE SMOKE COMES OUT OF THE MUFFLER ON FIRST OPERATION.
- DO NOT STAND BEHIND THE MUFFLER ON FIRST OPERATION.
- DO NOT USE AUTOMOTIVE WHEEL CLEANERS OR ANY CLEANING PRODUCTS WHICH CONTAIN ACIDIC ADDITIVES TO CLEAN AKRAPOVIČ EXHAUST SYSTEMS.

MAINTENANCE OF THE AKRAPOVIČ EXHAUST SYSTEM:

- Clean the titanium exhaust components with a multi-purpose spray lubricant (WD-40 or equivalent), carbon fiber exhaust components with soft and dry cloth and stainless steel components with soft cloth sprayed with contact cleaner, then wipe with soft and dry cloth. A change in the color of the exhaust system is normal due to the high temperatures.
- 2. Periodically make sure all the bolts and springs are sufficiently tight.



