

# FRONT FORK SPRING KIT

## FOR YAMAHA XV1600 WILD STAR

### ⚠ WARNING!

It is advisable to have an Öhlins dealer install the springs. Consult your vehicle service manual when installing this product.



- 1 Put the motorcycle on a workstand so that the front wheel barely touches the ground.

### ⚠ WARNING!


Make sure that the vehicle is securely supported so that it will not tip.

- 2 Remove the top cap.
- 3 Remove the original washer and fork spring. *Note! You will **not** need the original washer or spring for the installation of the Öhlins front fork spring.*
- 4 Check the oil level and the quality of the oil (with the front fork compressed and no springs installed).

Recommended oil level: **115 mm**

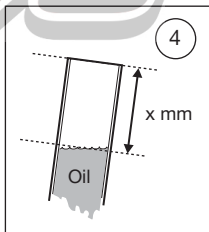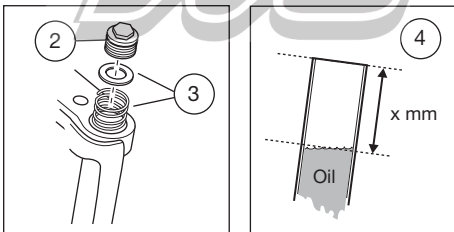

- 5 Install the Öhlins spring (tighter wound coils to the top), the spacer (if any; there are two options given here below) and finally the top cap (with the front fork fully extended).

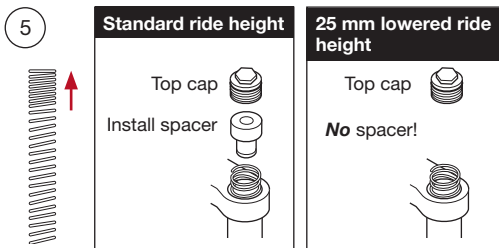

Spring kit 08849-01 20070913

Öhlins Racing AB, Box 722,  
S-194 27 Upplands Väsby, Sweden  
Phone +46 8 590 025 00, Fax +46 8 590 025 80,  
E-mail: [info@ohlins.se](mailto:info@ohlins.se), [www.ohlins.com](http://www.ohlins.com)

Part no. 01200-05

