

FRONT FORK SPRING KIT

FOR SUZUKI C800

⚠ WARNING!

It is advisable to have an Öhlins dealer install the springs. Consult your vehicle service manual when installing this product.


- 1 Put the motorcycle on a workstand so that the front wheel barely touches the ground.

⚠ WARNING!


Make sure that the vehicle is securely supported so that it will not tip.

- 2 Remove the top cap.
- 3 Remove the original spacer, washer and fork spring. *Note! You will **not** need the original spacer, washer or spring for the installation of the Öhlins front fork spring.*
- 4 Check the oil level and the quality of the oil (with the front fork compressed and no springs installed).

Recommended oil level: **195 mm**

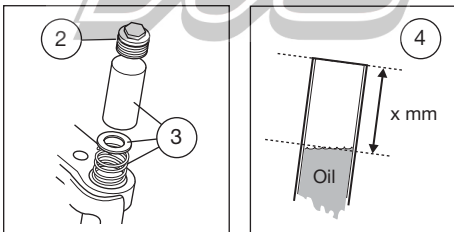

- 5 Install the Öhlins spring (tighter wound coils to the top), the spacer (if any; there are two options given here below) and finally the top cap (with the front fork fully extended).

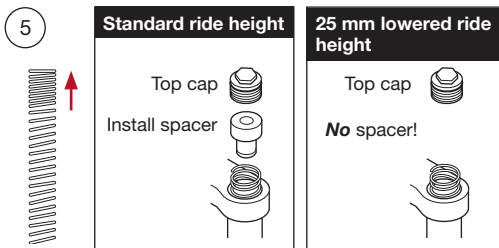

Spring kit 08852-01 20070910

Öhlins Racing AB, Box 722,
S-194 27 Upplands Väsby, Sweden
Phone +46 8 590 025 00, Fax +46 8 590 025 80,
E-mail: info@ohlins.se, www.ohlins.com

Part no. 01200-05

