

# FRONT FORK SPRING KIT

## FOR KAWASAKI VN900 CLASSIC

### ⚠ WARNING!

It is advisable to have an Öhlins dealer install the springs. Consult your vehicle service manual when installing this product.


- 1 Put the motorcycle on a workstand so that the front wheel barely touches the ground.

### ⚠ WARNING!

Make sure that the vehicle is securely supported so that it will not tip.

- 2 Remove the fork leg (rubber) caps. Press down the top cap while removing the circlip. Remove the top cap.


- 3 Remove the original spacer, washer and spring. *Note! You will **not** need the original spacer, washer or spring for the installation of the Öhlins front fork spring.*

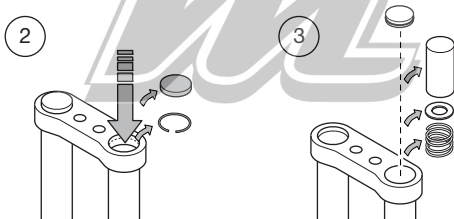

- 4 Check the oil level and the quality of the oil.

*Recommended oil level: 160 mm*

*Note! Measure the oil level when no springs are installed with the front fork fully compressed.*

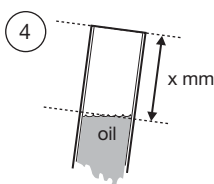

- 5 Install the Öhlins spring. There are two options regarding the spacer:

Standard ride height	25mm lowered ride height
Fork leg cap	Fork leg cap
Circlip	Circlip
Top cap	Top cap
Install Spacer	No spacer!
Spring	Spring

Spring kit 08858-01 20070921

Öhlins Racing AB, Box 722,  
S-194 27 Upplands Väsby, Sweden  
Phone +46 8 590 025 00, Fax +46 8 590 025 80,  
E-mail: [info@ohlins.se](mailto:info@ohlins.se), [www.ohlins.com](http://www.ohlins.com)

Part no. 01200-05

