

FOR KAWASAKI VN2000

▲ WARNING!

It is advisable to have an Öhlins dealer install the springs. Consult your vehicle service manual when installing this product.

1 Put the motorcycle on a workstand so that the front wheel barely touches the ground.


▲ WARNING!

Make sure that the vehicle is securely supported so that it will not tip.


- 2 Remove the:
- headlight top cover (3)
- headlight rim and lens, as a unit (4)
- inner bracket (5)
- turn signal assembly (6)headlight side panels (7)
- 8 Loosen the handle bar (by removing the handle bar clamps) and fold it gently backwards so it will rest on the fuel tank. Use a blanket to protect the finish.
- **9** Remove the fork leg (rubber) caps. Press down the top cap while removing the circlip.
- 10 Remove the original spacer, washer and spring.

 Note! You will not need the original spacer, washer or spring for the installation of the Öhlins front fork spring.
- 11 Check the oil level (when no springs are installed with the front fork fully compressed) and the quality of the oil.

Recommended oil level: 200 mm



12 Install the Öhlins spring (smallest diameter at the bottom), spacer (if any; two options here below), top cap (with the front fork fully extended) and finally the circlip.

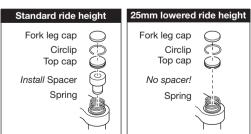

13 Install all removed parts as before the installation!

Spring kit 08860-01 20070921