

FRONT FORK SPRING KIT

FOR YAMAHA XVS950A

⚠ WARNING!

It is advisable to have an Öhlins dealer install the springs. Consult your vehicle service manual when installing this product.



- 1 Put the motorcycle on a workstand so that the front wheel barely touches the ground.

⚠ WARNING!

Make sure that the vehicle is securely supported so that it will not tip.


- 2 Remove the top cap.
- 3 Remove the original pre-load tube, washer and fork spring. *Note! You will need the original pre-load tube and washer for the installation of the Öhlins front fork spring.*
- 4 Check the oil level and the quality of the oil (with the front fork compressed and no springs installed).

Recommended oil level: 110 mm

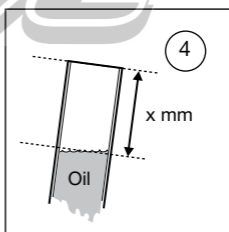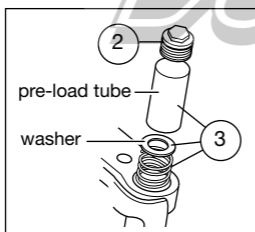


- 5 Install the Öhlins spring (tighter wound coils to the top), washer, pre-load tube, spacer (if any; there are two options given here below) and the top cap (with the front fork fully extended).

5



Standard ride height

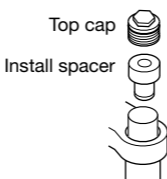

25 mm lowered ride height



Spring kit 08863-01 20090911