

#### Note!

Please note that there can be small differences between your product and the images in these instructions.

#### Note!

Please note that during storage and transport, especially at high ambient temperature, some of the oil and grease used for assembly may leak and stain the packaging. This will not cause damage to the product, wipe off the excessive oil or grease with a cloth.

#### Note!

Kit Contents

Description

Sleeve

Sleeve Sticker

Washer

Sleeve

Tool

Screw K6S

Owner's manual

Shock absorber

Sticker Memo notes

Before you install this product, check the kit contents. If anything is missing, please contact an Öhlins dealer.

Pcs

1

2

2

2

1

8

2

2

1

1

Part No

HD817

00123-13

00123-17

00192-01

01180-01

03118-19

03127-01

03128-01

03199-01

07241-02

#### A Warning!

Before you install this product, read the Öhlins Owner's manual. This product is an important part of the vehicle and the vehicle stability.

## Shock absorber for Harley Davidson FX-D

HD 817

## **Mounting Instructions**



# **MOUNTING INSTRUCTIONS**

## A Warning!

We strongly recommend to let an Öhlins dealer install this product.

## A Warning!

If you work with a lifted vehicle, make sure that it is safely supported to prevent it from tipping over.

#### Note!

When you work with this product, see the vehicle service manual for vehicle specific procedures and important data.

#### Note!

Before you install this product clean the vehicle.

#### 1

Put the motorcycle on a work stand so that the rear wheel barely touches the ground.

#### 2

Loosen and remove the original shock absorber.

## 3


Install the Öhlins shock absorber in the same position as the original shock absorber.

#### Note!

Lower the vehicle so that the suspension is slightly compressed before you tighten the screws.


## Caution!

Make sure that you tighten all screws to the correct torque and that nothing fouls or restricts movement of the shock absorber/front fork/ steering damper when the suspension is fully compressed or extended.

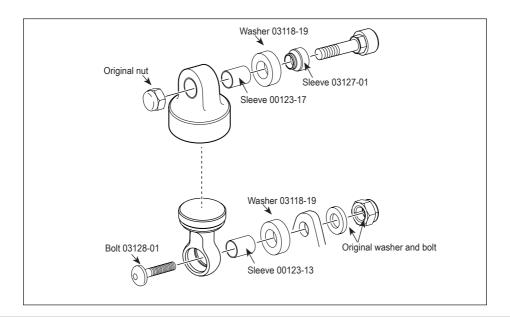

# MOUNTING INSTRUCTIONS



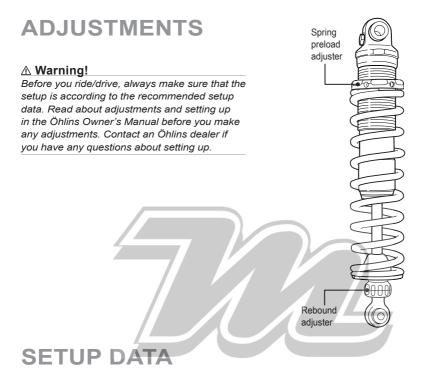

Length	305	mm
Stroke	61	mm
Rebound	14	clicks
Spring preload	26	mm

Öhlins products are subject to continuous improvement and development, therefore, although these instructions include the most up-to-date information available at the time of printing, minor updates may occur.

To find the latest information contact an Öhlins distributor. Please contact Öhlins if you have any questions regarding the contents in this document. Part no. MI\_HD817\_3 Issued 2015-07-01

© Öhlins Racing AB. All rights reserved. Any reprinting or unauthorized use without the written permission of Öhlins Racing AB is prohibited. Öhlins Racing AB Box 722 S-194 27 Upplands Väsby, Sweden Phone +46 8 590 025 00 fax +46 8 590 025 80



#### www.ohlins.com