

Setup data

Shock absorber length Shock absorber stroke Spring preload 240 mm 58 mm

Checking sag and ride height

Front suspension

F1. Bike on a stand with the suspension fully extended

F2. Bike on the ground without rider =

F3. Bike on the ground with rider =

Free sag

F1 - F3 =

Ride height

Rear suspension

R1. Bike on a stand with the suspension fully extended

R2. Bike on the ground without rider =

R3. Bike on the ground with rider =

Free sag

R1 - R2 =

Ride height

R1 - R3 =

Part No. HO 380. Issued 03 11 10

NOTE!

If ride height is higher than recommended, softer spring/springs must be used.
If ride height is lower than recommended, harder spring/springs must be used.
Contact your Öhlins dealer for advice.



Öhlins Racing AB, Box 722, S-194 27 Upplands Väsby, Sweden. Phone +46 8 590 025 00. Fax +46 8 590 025 80.

Mounting Instructions

Öhlins shock absorber kit HO 380 for Honda XR 50

Öhlins shock absorber 36 DW

Your Öhlins shock absorber type 36 DW features the following adjusters:

Spring pre-load adjuster

Adjustments are made by turning the rings on the shock absorber body. Clockwise for harder adjustment, counter clockwise too release the preload.

NOTE!

When delivered the Öhlins shock absorber is dialed to recommended setting for the specific brand and make of the motorcycle.





Safety signals

Important information concerning safety is distinguished in this manual by the following notations:



The Safety alert symbol means: Caution! Your safety is involved.



Failure to follow warning instructions could result in severe or fatal injury to anyone working with, inspecting or using the suspension, or to bystanders.

CAUTION!

Caution indicates that special precautions must be taken to avoid damage to the suspension.

NOTE!

This indicates information that is of importance with regard to procedures.

Before installation

Öhlins Racing AB can not be held responsible for any damage whatsoever to shock absorber or vehicle, or injury to persons, if the instructions for fitting and maintenance are not followed exactly.

Similarly, the warranty will become null and void if the instructions are not adhered to.

A WARNING!

- 1. Installing a shock absorber, that is not approved by the vehicle manufacturer, may affect the stability of your vehicle. Öhlins Racing AB cannot be held responsible for any personal injury or damage whatsoever that may occur after fitting the shock absorber. Contact an Öhlins dealer or other qualified person for advice.
- 2. Please study and make certain that you fully understand all the mounting instructions and the owners manuals before handling this shock absorber kit. If you have any questions regarding proper installation procedures, contact an Öhlins dealer or other qualified person.
- 3. The vehicle service manual must be referred to when installing the Öhlins shock absorber

Öhlins products are subject to continual improvement and development. Consequently, although these instructions include the most up-to-date information available at the time of printing, there may be minor differences between your suspension and this manual. Please consult your Öhlins dealer if you have any questions with regard to the contents of the manual.

NOTE!

During storage and transportation, especially at high ambient temperature, the oil and grease used for assembling may run out inside the packing and damage the expanded polystyrene packing material. This is not unusual and is in no way detrimental to the shock absorber.

Kit contents

Before installing the shock absorber, please check the contents of the kit. If anything is missing, contact your Öhlins dealer.

Description	Pcs.	Part No.
Shock absorber 36 DW	1	HO 380
Sticker Öhlins	2	00197-01
Sticker memo notes	1	01180-01
C-spanner	1	00710-01
Spring clip	1	00116-01
Owners manual	_1	

Mounting instructions

Put the motorcycle on a stand so the rear wheel is clear of the ground. Make sure it's steadily positioned and will not fall over.

A WARNING!


- 1. It's advisable to have an Öhlins dealer or other qualified person to fit your shock absorber.
- 2. Instructions in the vehicle service manual are to be followed when changing the shock
- securely supported to prevent it from falling.

5

Refit the seat and the fairing.

NOTE!


Make sure that all bolts are tightened to the correct torque and that nothing fouls or restricts movement of the shock absorber when the suspension is being fully compressed or extended.

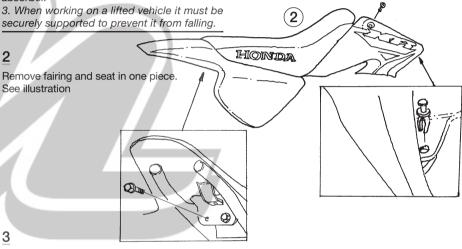

Loosen and remove the standard shock absorber. See the motorcycles Workshop manual.

Fit the Öhlins shock absorber in the same position as the standard shock absorber.

Continue your work according to the Owners Manual, section Adjustments

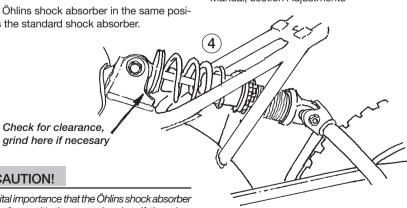

CAUTION!

It is of vital importance that the Öhlins shock absorber not interferes with the upper bracket. If there is a clearance problem, the lower part of the bracket on the motorcycle must be grinded