


Adjustments

⚠ Warning!

Before riding, always make sure that the basic settings made by Öhlins are according to recommended Set-up Data. Read about adjustments and setting up in the Öhlins Owner's Manual before you make any adjustments. Contact an Öhlins dealer if you have any questions about setting up the shock absorber.

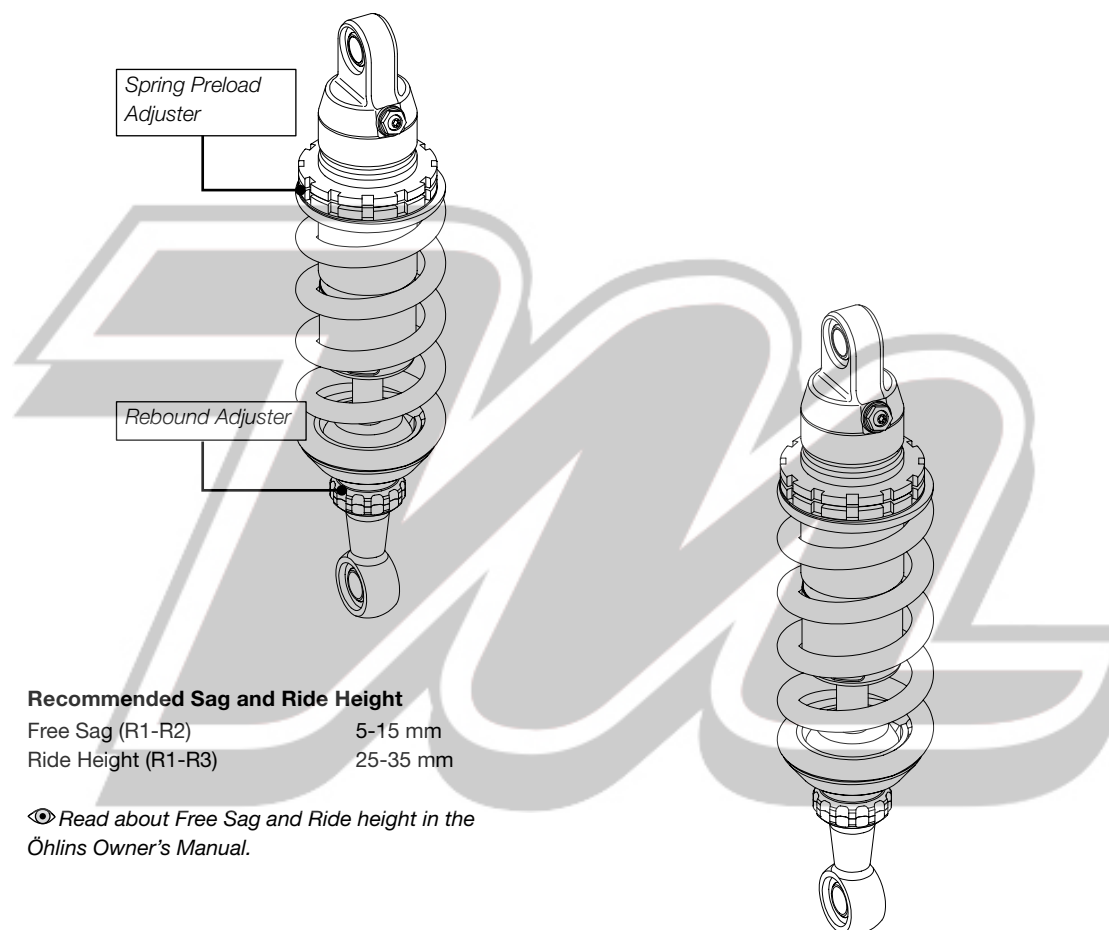

Before installing this product, check the contents of the kit. If anything is missing, please contact an Öhlins dealer.

Kit Contents

	Part No.	Pcs.
Shock absorber	KA 044	1
Sticker Öhlins	00192-01	2
C-spanner	00710-02	1
Memo Notes Sticker	01180-01	1
Screw M10x1,25x55	00439-15	1
Owner's Manual	07241-02	1

Set-up Data

Recommended set-up

Rebound	12 clicks
Spring Preload	13 mm
Spring Rate	95 N/mm
Spring; Free length	160 mm

Recommended Sag and Ride Height

Free Sag (R1-R2)	5-15 mm
Ride Height (R1-R3)	25-35 mm

👁 Read about Free Sag and Ride height in the Öhlins Owner's Manual.

Shock absorber data

Length	328 mm
Stroke	68 mm

Please note that during storage and transportation, especially at high ambient temperature, some of the oil and grease used for assembling may leak and stain the packaging. This is in no way detrimental to the product, wipe off the excessive oil/grease with a cloth.

⚠ Warning!

Before installing this product, read the Öhlins Owner's Manual. The shock absorber is an important part of your vehicle and will affect the stability.

👁 Öhlins products are subject to continuous improvement and development, therefore, although these instructions include the most up-to-date information available at the time of printing, minor updates may occur.

To find the latest information contact your Öhlins distributor. Please consult your Öhlins dealer if you have any questions regarding the contents in this document.

Part no. KA044_0
Issued 2011-11-04



© Öhlins Racing AB. All rights reserved. Any reprinting or unauthorized use without the written permission of Öhlins Racing AB is prohibited.

Öhlins Racing AB
Box 722
S-194 27 Upplands Väsby, Sweden
Phone +46 8 590 025 00
fax +46 8 590 025 80



www.ohlins.com

Shock Absorber for Kawasaki Z 750 / S **KA 044**

Mounting Instructions



How to install

⚠ Warning!

It is advisable to have an Öhlins dealer install the shock absorber.

When installing, read the Vehicle Service Manual.

1

Place the motorcycle on the centerstand so that the rear wheel barely touches the ground. The swing arm must be free, so that the suspension is unloaded.

⚠ Warning!

Make sure the vehicle is securely supported so that it will not tip.

👁 Note!

Clean the vehicle thoroughly before installing the Öhlins shock absorber.

2

Remove the mudguard.

3

Loosen the drop links from the triangle link and let them hang loose.

4

Loosen first the lower shock absorber attachment, then the upper shock absorber attachment, then remove the original shock absorber upwards to the left side of the vehicle.

5

Install the Öhlins shock absorber in reversed order, do not tighten the screw.

👁 Note!

Lower the motorcycle so that the shock absorber is slightly compressed, before tightening the screws.

11

Reinstall all removed parts in the same way as they were before installation of the Öhlins shock absorber.

👁 Caution!

Make sure that all screws are tightened to the correct torque and that nothing fouls or restricts movement of the shock absorber when the suspension is being fully compressed or extended.

