

Setup data

Front fork adjustment

Recommended fork springs

452,5 mm
130 mm
22 clicks
15 clicks
2 3/4 turns
10 mm
$35 \pm 5 \text{ mm}$
100 ±5 mm
8 mm

std.

std.

Checking sag and ride height

Front suspension		
F1. Bike on a stand with the	. 4	
suspension fully extende	ed	=
F2. Bike on the ground without	out rider	=
F3. Bike on the ground with	rider	=
Free sag	F1 - F2	=
Ride height	F1 - F3	=

Re	ear suspension		
R1	.Bike on a stand with the suspension fully extended		=
R2	Bike on the ground with	out rider	=
R3	B. Bike on the ground with	rider	=
Fr	ee sag	R1 - R2	=

Ride height NOTE!

If ride height is higher than recommended, softer spring/springs must be used. If ride height is lower than recommended, harder spring/springs must be used. Contact your Öhlins dealer for advice.

R1 - R3 =

291, issued 02 01




Öhlins Racing AB, Box 722, S-194 27 Upplands Väsby, Sweden. Phone +46 8 590 025 00. Fax +46 8 590 025 80.

www.ohlins.com

Owners Manual

Mounting instructions Öhlins shock absorber kit KA 291 for Kawasaki KX 125 2002

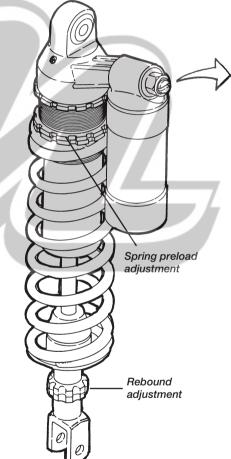

Low speed compression adjustment

> High speed compression adjustment

Your Öhlins shock absorber type 46 PRX (Q) features the followinging adjusters:

Compression damping:

Adjustments are made on top of the reservoir. Low speed adjustments: Slotted centre screw. High speed adjustments: Hexagon screw.

Rebound damping

Adjuster wheel on the piston shaft above the end bracket. Spring preload

Adjustment made by rings on cylinder house.

Use C-spanner.

When delivered the Öhlins shock absorber is dialed to recommended settings for the specific brand and make of the motorcycle. If you have changed the setting check

The adjusters have a normal right hand tread. Turn clockvise to fully closed. Turn counter clockvise to open and count the clicks until you reach the recommended number of clicks.

Do not use to much force, delicate sealing surfaces can be damaged. Do use fingers only.



Safety signals

Important information concerning safety is distinguished in this manual by the following notations:



The Safety alert symbol means: Caution! Your safety is involved.



Failure to follow warning instructions could result in **severe or fatal injury** to anyone working with, inspecting or using the suspension, or to bystanders.

CAUTION!

Caution indicates that special precautions must be taken to avoid damage to the suspension.

NOTE!

This indicates information that is of importance with regard to procedures.

Before installation

Öhlins Racing AB can not be held responsible for any damage whatsoever to shock absorber or vehicle, or injury to persons, if the instructions for fitting and maintenance are not followed exactly.

Similarly, the warranty will become null and void if the instructions are not adhered to.

A WARNING!

- 1. Installing a shock absorber, that is not approved by the vehicle manufacturer, may affect the stability of your vehicle. Öhlins Racing AB cannot be held responsible for any personal injury or damage whatsoever that may occur after fitting the shock absorber. Contact an Öhlins dealer or other qualified person for advice.
- Please study and make certain that you fully understand all the mounting instructions and the owners manuals before handling this shock absorber kit. If you have any questions regarding proper installation procedures, contact an Öhlins dealer or other qualified person.
- 3. The vehicle service manual must be referred to when installing the Öhlins shock absorber

Öhlins products are subject to continual improvement and development. Consequently, although these instructions include the most up-to-date information available at the time of printing, there may be minor differences between your suspension and this manual. Please consult your Öhlins dealer if you have any questions with regard to the contents of the manual.

NOTE!

During storage and transportation, especially at high ambient temperature, the oil and grease used for assembling may run out inside the packing and damage the expanded polystyrene packing material. This is not unusual and is in no way detrimental to the shock absorber.

Kit contents

Before installing the shock absorber, please check the contents of the kit, listed on the front page of this instruction. If anything is missing, contact your Öhlins dealer.

Description	Pcs.	Part No.
Shock absorber	1	KA 291
Sticker Öhlins	2	00197-01
Sticker memo notes	1	01180-01
C-spanner	1	00710-02
Owners manual	1	

Mounting instructions

1

Put the motorcycle on a stand so the rear wheel has ground clearance. Make sure it's steadily positioned and will not fall over.

A WARNING!

- 1. It's advisable to have an Öhlins dealer or other qualified person to fit your shock absorber.
- 2. Instructions in the vehicle service manual are to be followed when changing the shock absorber.
- 3. When working on a lifted vehicle it must be securely supported to prevent it from falling.

2

Remove the seat by loosening the rear attachment screws.

3

Loosen the rear frame and the hose clamp from the air filter. Disconnect electrical wires. Remove the whole unit with air filter and muffler. 4

Loosen the lower and the upper attachment of the original shock absorber and remove it.

5


Fit the Öhlins shock absorber in the same way as the original unit. Fasten it by using the two original screws.





6.

Place the seat support and seat back in position and factor them

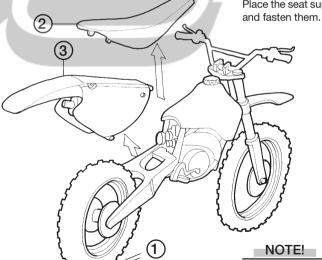

Make sure that all bolts are tightened to the correct torque and that nothing fouls or restricts movement of the shock absorber when the suspension is being fully compressed or extended.

7.

Continue your work according to the Owners Manual, section Adjustments.