
Adjustments

▲ Warning!

Before riding, always make sure that the basic settings made by Öhlins are according to recommended Set-up Data. Read about adjustments and setting up in the Öhlins Owner's Manual before you make any adjustments. Contact an Öhlins dealer if you have any questions about setting up the shock absorber.

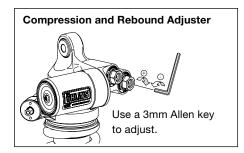


Set-up Data

Recommended set-up

Spring Preload 14 mm Compression 14 clicks Rebound 16 clicks

During our test ride height adjuster was in highest position.

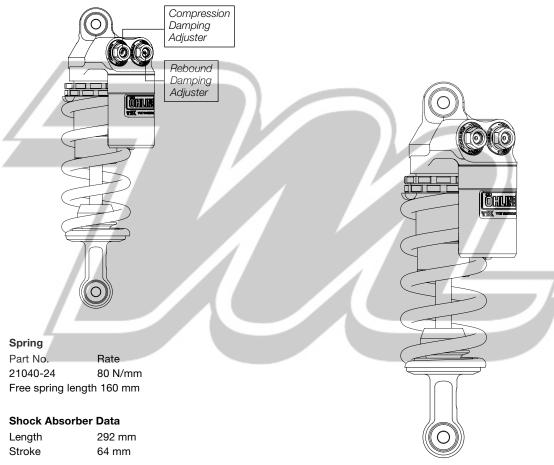

Before installing this product, check the contents of the kit. If anything is missing, please contact your nearest Öhlins dealer.

 Kit Contents
 Part No.
 Pcs.

 Shock absorber
 KT 931
 1

 Öhlins Sticker
 00192-01
 2

 C-Spanner
 00710-05
 2

 Memo Notes Sticker
 01180-01
 1

 Owner's Manual
 07242-01
 1

Please note that during storage and transportation, especially at high ambient temperature, some of the oil and grease used for assembling may leak and stain the packaging. This is in no way detrimental to the product, wipe off the excessive oil/grease with a cloth.

▲ Warning!

Before installing this product, read the Öhlins Owner's Manual. The shock absorber is an important part of your vehicle and may affect the stability of your vehicle.

This products are subject to continuous improvement and development, therefore, although these instructions include the most up-to-date information available at the time of printing, minor updates may occur.

To find the latest information contact your Öhlins distributor. Please consult your Öhlins dealer if you have any questions regarding the contents in this document.

> Part no. KT_931_0 Issued 2011-11-21





Shock Absorber for KTM RC8

KT 931

Mounting Instructions

© Öhlins Racing AB. All rights reserved. Any reprinting or unauthorized use without the written permission of Öhlins Racing AB is prohibited.

Öhlins Racing AB Box 722 S-194 27 Upplands Väsby, Sweden Phone +46 8 590 025 00 fax +46 8 590 025 80





How to install How to install

▲ Warning!

It is advisable to have an Öhlins dealer install the shock absorber.

When installing, consult your Vehicle Service Manual.

1

Put the motorcycle on a workstand so that the rear wheel barely touches the ground.

▲ Warning!

Make sure the vehicle is securely supported so that it will not tip.

2

Remove the screw connecting the link and the swing arm.

3

Remove the upper shock absorber screw.

4

Remove the link rocker arm screw and remove the whole link unit.

5

Remove the lower shock absorber screw. Remove the original shock absorber.

Note!

Before installing the Öhlins shock absorber clean the vehicle thoroughly.

- 6

Install the Öhlins shock absorber in the same way as the original unit.

• Note!


Lower the motorcycle so that the shock absorber is sligthly compressed, before tightening the screws.

7

Make sure that all removed parts are reinstalled in the same way as they were before the installation of the Öhlins shock absorber.

Caution!

Make sure that all screws are tightened to the correct torque and that nothing fouls or restricts movement of the shock absorber when the suspension is fully compressed or extended.

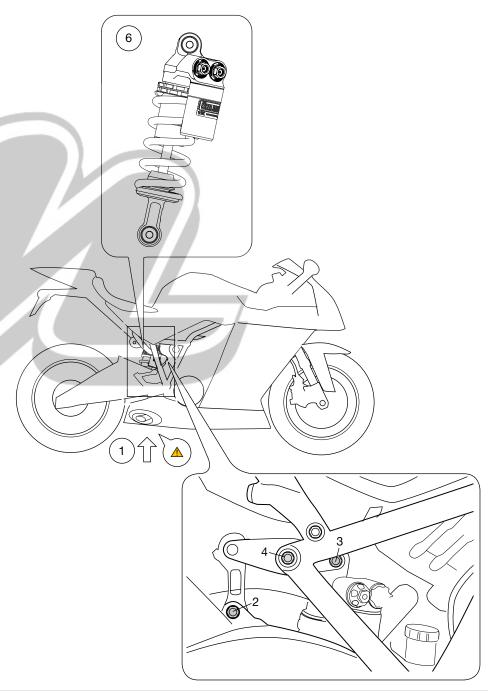

2