


# Adjustments

## ⚠ Warning!

Before riding, always make sure that the basic settings made by Öhlins are according to recommended Set-up Data. Read about adjustments and setting up in the Öhlins Owner's Manual before you make any adjustments. Contact an Öhlins dealer if you have any questions about setting up the shock absorber.

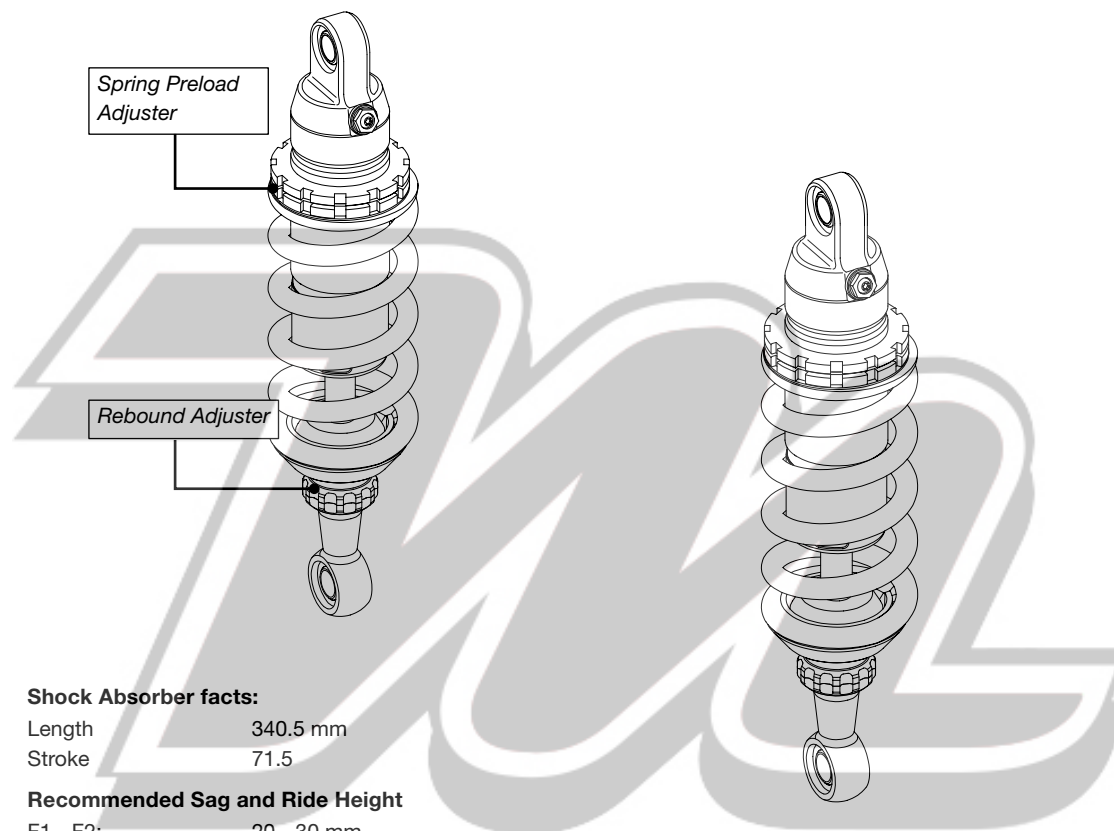

Before installing this product, check the contents of the kit. If anything is missing, please contact your nearest Öhlins dealer.

### Kit Contents

	Part No.	Pcs.
Shock absorber	SU 043	1
Öhlins Sticker	00192-01	2
C-spanner	00710-02	1
Memo Notes Sticker	01180-01	1
Owner's Manual	07241-02	1

Please note that during storage and transportation, especially at high ambient temperature, some of the oil and grease used for assembling may leak and stain the packaging. This is in no way detrimental to the product, wipe off the excessive oil/grease with a cloth.

## ⚠ Warning!

Before installing this product, read the Öhlins Owner's Manual. The shock absorber is an important part of your vehicle and may affect the stability of your vehicle.

# Set-up Data

## Recommended setting

Rebound	14 clicks
Spring Preload	15 mm

## Spring

Part No.	Rate
01096-31	95 N/mm
Free spring length	190 mm

## Shock Absorber facts:

Length	340,5 mm
Stroke	71,5

## Recommended Sag and Ride Height

F1 - F2:	20 - 30 mm
F1 - F3:	30 - 40 mm
R1 - R2:	5 - 15 mm
R1 - R3:	40 - 50 mm

👁 Read more about sag and ride height in the Öhlins Owner's Manual.

👁 Öhlins products are subject to continuous improvement and development, therefore, although these instructions include the most up-to-date information available at the time of printing, minor updates may occur.

To find the latest information contact your Öhlins distributor. Please consult your Öhlins dealer if you have any questions regarding the contents in this document.

Part no. SU 043\_0  
Issued 2010-11-05



© Öhlins Racing AB. All rights reserved. Any reprinting or unauthorized use without the written permission of Öhlins Racing AB is prohibited.

Öhlins Racing AB  
Box 722  
S-194 27 Upplands Väsby, Sweden  
Phone +46 8 590 025 00  
fax +46 8 590 025 80



[www.ohlins.com](http://www.ohlins.com)

# Shock Absorber for Suzuki DL650 V-Strom

# SU 043

## Mounting Instructions



**⚠ Warning!**

*It is advisable to have an Öhlins dealer install the shock absorber.*

**👁 Note!**

*When installing, consult your Vehicle Service Manual.*

**👁 Note!**

*Before installing the Öhlins shock absorber clean the vehicle thoroughly.*

**1**

Put the motorcycle on a workstand so that the rear wheel barely touches the ground.

**⚠ Warning!**

*Make sure the vehicle is securely supported so that it will not tip.*

**2**

Remove the seat, luggage rack and side panels on both sides.

**3**

Remove the bolt for the pull rods to the triangle link in the suspension linkage.

**4**

Remove the lower attachment of the original shock absorber.

**5**

Loosen the brake fluid reservoir mounting screw.

**6**

Loosen the ABS unit bracket mounting screws.

**7**

Remove the two silencer mounting screws to the rear sub frame.

**8**

Loosen the upper and remove the lower mounting bolts for the rear sub frame.

**9**

Lift the rear sub frame carefully to be able to remove the standard pre-load adjuster.

**👁 Caution!**

*Be careful so that you do not bend the brake lines.*

**10**

Remove the upper shock mounting bolt and remove the original shock absorber downwards.

**11**

Install the Öhlins shock in the same way as the original unit. Do not tighten the screws yet.

**👁 Note!**

*Lower the motorcycle so that the shock absorber is slightly compressed, before tightening the screws.*

**12**

Tighten all screws to the torque specified by Suzuki.

**13**

Make sure that all removed parts are reinstalled in the same way as they were before the installation.

**👁 Caution!**

*Make sure that all screws are tightened to the correct torque and that nothing fouls or restricts movement of the shock absorber when the suspension is fully compressed or extended.*

