

Bike on a stand.

Bike on the ground.

Bike with rider on.

Setup data

Shock absorber length Shock absorber stroke Spring preload Rebound damping adjuster Compression damping adjuster 2 clicks

328 (+10/-0) mm 91 mm 24 mm 12 clicks

Checking sag and ride height

Front suspension

F1. Bike on a stand with the suspension fully extended

F2. Bike on the ground without rider =

F3. Bike on the ground with rider

Free sag

Ride height

F1 - F3 =

F1 - F2 =

Rear suspension

R1. Bike on a stand with the suspension fully extended

R2. Bike on the ground without rider =

R3. Bike on the ground with rider

Free sag

R1 - R2 =

Ride height

R1 - R3 =

01 08

Part No. SU 133. Issued 02

NOTE!

If ride height is higher than recommended. softer spring/springs must be used. If ride height is lower than recommended, harder spring/springs must be used. Contact your Öhlins dealer for advice.



Öhlins Racing AB, Box 722, S-194 27 Upplands Väsby, Sweden. Phone +46 8 590 025 00. Fax +46 8 590 025 80. www.ohlins.com

Owners Manual

Mounting instructions Öhlins shock absorber kit SU 133 for Suzuki GSX 1400



Öhlins shock absorber type 36 PRCLB

Adjusters

Your Öhlins shock absorber type 36 PRCLB features the followinging adjusters:

Compression damping:

Adjustments are made on top of the reservoir.

Rebound damping

Adjuster whell on the piston shaft above the end bracket.

Spring preload

Adjustments are made by turning the knob on the hydraulic adjuster. Clockwise for harder adjustment. counter clockwise too release the preload.

Lenght adjustment

Adjustment is made by turning the end eye.

NOTE!

When delivered the Öhlins shock absorber is dialed to recommended settings for the specific brand and make of the motorcycle. If you have changed the setting check like this:

The adjusters have a normal right hand tread. Turn clockvise to fully closed. Turn counter clockvise to open and count the clicks until you reach the recommended number of clicks.

CAUTION!

Do not use to much force, delicate sealing surfaces can be damaged. Do use fingers only.

- Compression damping adjuster
- (2) Rebound damping adjuster
- Spring preload adjuster
- Length adjustment nuts



Safety signals

Important information concerning safety is distinguished in this manual by the following notations:



The Safety alert symbol means: Caution! Your safety is involved.



Failure to follow warning instructions could result in **severe or fatal injury** to anyone working with, inspecting or using the suspension, or to bystanders.

CAUTION!

Caution indicates that special precautions must be taken to avoid damage to the suspension.

NOTE!

This indicates information that is of importance with regard to procedures.

Before installation

Öhlins Racing AB can not be held responsible for any damage whatsoever to shock absorber or vehicle, or injury to persons, if the instructions for fitting and maintenance are not followed exactly.

Similarly, the warranty will become null and void if the instructions are not adhered to.

A WARNING!

- 1. Installing a shock absorber, that is not approved by the vehicle manufacturer, may affect the stability of your vehicle. Öhlins Racing AB cannot be held responsible for any personal injury or damage whatsoever that may occur after fitting the shock absorber. Contact an Öhlins dealer or other qualified person for advice.
- Please study and make certain that you fully understand all the mounting instructions and the owners manuals before handling this shock absorber kit. If you have any questions regarding proper installation procedures, contact an Öhlins dealer or other qualified person.
- 3. The vehicle service manual must be referred to when installing the Öhlins shock absorber

Öhlins products are subject to continual improvement and development. Consequently, although these instructions include the most up-to-date information available at the time of printing, there may be minor differences between your suspension and this manual. Please consult your Öhlins dealer if you have any questions with regard to the contents of the manual.

NOTE!

During storage and transportation, especially at high ambient temperature, the oil and grease used for assembling may run out inside the packing and damage the expanded polystyrene packing material. This is not unusual and is in no way detrimental to the shock absorber.

Kit contents

Before installing the shock absorber, please check the contents of the kit, listed on the front page of this instruction. If anything is missing, contact your Öhlins dealer.

Description Pcs. Part No. Shock absorber 36PRCLB 2 SU 133 Sticker Öhlins 2 00192-01 Owners manual 1

Mounting instructions

1

Put the motorcucle on a stand so the rear wheel is clear of ground. Make sure it's steadily fixed so it will not fall over.

A WARNING!

- 1. It's advisable to have an Öhlins dealer or other qualified person to fit your shock absorber.
- Instructions in the vehicle service manual are to be followed when changing the shock absorber.
- 3. When working on a lifted vehicle it must be securely supported to prevent it from falling.

2

Loosen and remove the standard shock absorber(s). See the motorcycle's Workshop maual.

3

Fit the Öhlins shock absorber(s) in the same position as the standard shock absorber.

4

Continue yor work according to the Owners Manual, section Adjustments.

NOTE!

Make sure that all bolts are tightened to the correct torque and that nothing fouls or restricts movement of the shock absorber when the suspension is being fully compressed or extended.




The shock absorber shall be mounted with the cylinder head upwards and the reservoir backwards. Use the supplied washers and sleeves to fit the shock absorber on your bike.

A WARNING!

If the shock absorber has an adjustable end eye/bracket, this must not be treaded out more than that one groove is fully visible beneath the lock nut. Make sure that the lock nut is tightened after adjustment.





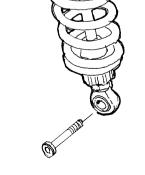

Wheel

side