



TERMIGNONI S.p.a.

Via della Rampina 1
15077 Predosa – Italy
www.termignoni.it

Tel. 0039.0131.71666
Fax 0039.0131.71696
info@termignoni.it

ASSEMBLY NOTE / SCHEDA DI MONTAGGIO

S063


SUZUKI GSX R 1000 '09

Y no-CAT

A



B

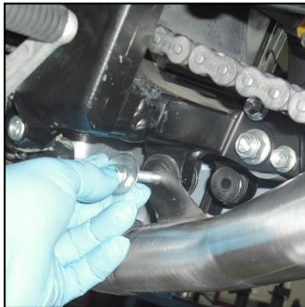


MONTAGGIO CORPO FINALE TERMIGNONI

- Avvitare la sonda lambda sul corpo finale (Fig.A);
- Inserire il corpo finale sul collettore ed utilizzare la vite di serie con la rondella e dado autobloccante M8 (in dotazione) per fissare il corpo finale (Fig. B);
- Montare i 2 silenziatori Termignoni, facendo riferimento alle istruzioni di montaggio dei 2 silenziatori (Cod.S062);
- Stringere tutte le viti (Fig.C) dopo aver posizionato correttamente i silenziatori.
- Rimuovere le boccole di fissaggio dei silenziatori di serie (Fig.D – E).

C




D

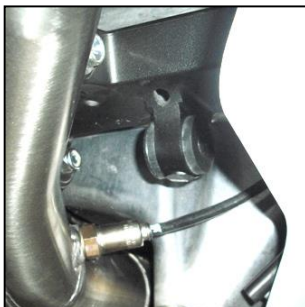

MOUNTING THE FINAL BODY TERMIGNONI

- Screw the lambda probe on the final body (Fig.A);
- Mount the final body to the collector using the original screw with the washer and the M8 self locking nut (in the pack) to fix the final body (Fig.B);
- Mount the 2 Termignoni silencers following the assembly note of the 2 silencers (Code S062);
- Tighten all screws (Fig.C) after positioning the silencers correctly.
- Remove the bushing that blocks the original silencers (Fig. D-E)

E

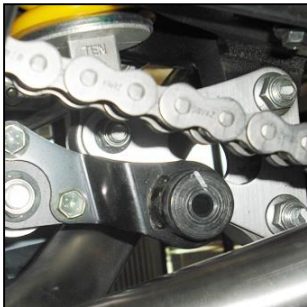

F

PACKING LIST

- 1) N°1 FINAL BODY / 1 CORPO FINALE **S063**
- 2) N°1 WASHER / 1 RONDELLA **8X32**
- 3) N°1 SELF BLOCKING NUT / 1 DADO AUTOBLOCCANTE **M8**

