

Bike on a stand.

Bike on the ground.

Bike with rider on.

## Setup data

Lenght 300 mm Stroke 63 mm Rebound adjustment 12 clicks Preload 18 mm

# Checking sag and ride height

### Front suspension

F1. Bike on a stand with the suspension fully extended

F2. Bike on the ground without rider = ......

F3. Bike on the ground with rider

Free sag

Ride height F1 - F3 = ..........

## Rear suspension

R1. Bike on a stand with the suspension fully extended

R2. Bike on the ground without rider = .........

R3. Bike on the ground with rider = .....

Free sag

R1 - R2 = .....

F1 - F2 = .....

Ride height

R1 - R3 = .....

YA 203, issued 02 03 12

#### NOTE!

If ride height is higher than recommended, softer spring/springs must be used.
If ride height is lower than recommended, harder spring/springs must be used.
Contact your Öhlins dealer for advice.



Öhlins Racing AB, Box 722, S-194 27 Upplands Väsby, Sweden. Phone +46 8 590 025 00. Fax +46 8 590 025 80.

www.ohlins.com

# **Owners Manual**

# Mounting instructions Öhlins shock absorber kit YA 203 for Yamaha BT 1100 Bulldog



# Öhlins shock absorber 46 ERS

#### Adjusters

Your Öhlins shock absorber type 46 ERS features the followinging adjusters:

#### Rebound damping

Adjuster wheel on the piston shaft above the end bracket.

### Hydraulic spring preload

Adjustments are made by turning the knob on the hydraulic adjuster. Clockwise for harder adjustment, counter clockwise to release the preload.

When delivered the Öhlins shock absorber is dialed to recommended settings for the specific brand and make of the motorcycle. If you have changed the setting check like this:

The adjusters have a normal right hand tread. Turn clockwise to fully closed. Turn counter clockwise to open and count the clicks until you reach the recommended number of clicks.

Do not use to much force, delicate sealing surfaces can be damaged. Do use fingers only.



# Safety signals

Important information concerning safety is distinguished in this manual by the following notations:



The Safety alert symbol means: Caution! Your safety is involved.



Failure to follow warning instructions could result in **severe or fatal injury** to anyone working with, inspecting or using the suspension, or to bystanders.

## CAUTION!

Caution indicates that special precautions must be taken to avoid damage to the suspension.

#### NOTE!

This indicates information that is of importance with regard to procedures.

## Before installation

Öhlins Racing AB can not be held responsible for any damage whatsoever to shock absorber or vehicle, or injury to persons, if the instructions for fitting and maintenance are not followed exactly.

Similarly, the warranty will become null and void if the instructions are not adhered to.

# **A** WARNING!

- 1. Installing a shock absorber, that is not approved by the vehicle manufacturer, may affect the stability of your vehicle. Öhlins Racing AB cannot be held responsible for any personal injury or damage whatsoever that may occur after fitting the shock absorber. Contact an Öhlins dealer or other qualified person for advice.
- 2. Please study and make certain that you fully understand all the mounting instructions and the owners manuals before handling this shock absorber kit. If you have any questions regarding proper installation procedures, contact an Öhlins dealer or other qualified person.
- 3. The vehicle service manual must be referred to when installing the Öhlins shock absorber

Öhlins products are subject to continual improvement and development. Consequently, although these instructions include the most up-to-date information available at the time of printing, there may be minor differences between your suspension and this manual. Please consult your Öhlins dealer if you have any questions with regard to the contents of the manual.

### NOTE!

During storage and transportation, especially at high ambient temperature, the oil and grease used for assembling may run out inside the packing and damage the expanded polystyrene packing material. This is not unusual and is in no way detrimental to the shock absorber.

#### Kit contents

Before installing the shock absorber, please check the contents of the kit, listed on the front page of this instruction. If anything is missing, contact your Öhlins dealer.

Description	Pcs.	Part No.
Shock absorber 46ERS	1	YA 203
Tie-rap	2	00231-01
Sticker Öhlins	2	00192-01
Sticker "memo notes"	1	01180-01
Owners manual	1	

# **Mounting Instructions**

1


Put the motorcycle on a stand so the rear wheel is clear of the ground. Make sure it's steadily fixed so it will not fall over.

# **A** WARNING!


- 1. It's advisable to have an Öhlins dealer or other qualified person to fit your shock absorber.
- 2. Instructions in the vehicle service manual are to be followed when changing the shock absorber.
- 3. When working on a lifted vehicle it must be securely supported to prevent it from falling.

2

Loosen the link arms (pulling rods) from the triangle link.

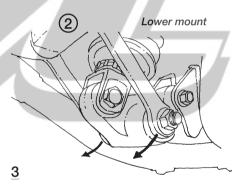

Loosen first the lower shock absorber attachment then the upper shock absorber attachment.

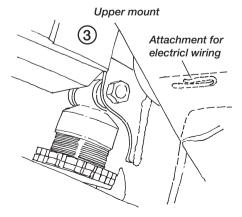

### NOTE!

It might be necessary to loosen the electrical wiring, leading backwards on the right side of the frame, from the attachment beside the upper shock absorber mount.

## 4

Remove the shock absorber downwards.

5


Mount the Ohlins shock absorber by lifting it in position from downwards.

6

Attach the upper bracket of the shock absorber.

7

Fit the Öhlins hydraulic preload adjuster on the inside of the right rear footrest bracket and the silencer bracket. Remove the washer on the wheel side and use the original bolt.

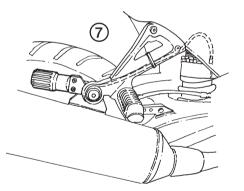

8

Fix the adjuster and let the hose go in soft turns to the spring preloder. Fix the hose with tie-raps.

#### NOTE!

Make sure that all bolts are tightened to the correct torque and that nothing fouls or restricts movement of the shock absorber when the suspension is being fully compressed or extended.

9

Continue your work according to the Owners manual, section adjustments.